













































BACKLINE & ORCHESTRAL

Rental Solutions For All Musicians

Brand	Model	Title	Image	Category
Ableton	push2+11	Ableton Push 2		DJ Gear
Akai	APC 40	AKAI APC40		DJ Gear
Akai	MPD26	Akai MPD26		DJ Gear
Allen & Heath	XONE:92	Allen & Heath XONE:92		DJ Gear
Allen & Heath	XONE:96	Allen & Heath XONE:96		DJ Gear
Allen & Heath	XONE:DB4	Allen & Heath XONE:DB4		DJ Gear
Alpha Tetta	euphonia	Alpha Theta Euphonia		DJ Gear
ddrum	DDTI	ddrum DDTI Trigger Interface		DJ Gear
Denon	VL12 Prime	Denon VL12 Prime		DJ Gear
Focusrite	Scarlett 2i2 4th Gen	Focusrite Scarlett 2i2 4th Gen		DJ Gear
	DMX512	Jacobs DMX512 Light Console		DJ Gear
M Audio	AIR192X4	M-Audio AIR 192 4		DJ Gear
Motu	UltraLite-MK4	Motu UltraLite-MK4		DJ Gear
Native Instruments	Traktor Kontrol F1	Native Instruments Traktor Kontrol F1		DJ Gear
Native Instruments	Traktor Kontrol S4 MK3	Native Instruments Traktor Kontrol S4 MK3		DJ Gear
Native Instruments	Traktor Scratch A10	Native Instruments Traktor Scratch A10		DJ Gear

Native Instruments	Traktor X1 MK3	Native Instruments Traktor X1 MK3		DJ Gear
Novation	DICER	Novation DICER		DJ Gear
Numark	NS6II	Numark NS6II		DJ Gear
Pioneer	DDJ-REV7	Pioneer DDJ-REV7		DJ Gear
Pioneer	CDJ-2000	Pioneer CDJ 2000		DJ Gear
Pioneer	CDJ-2000NXS2	Pioneer CDJ 2000 NXS2		DJ Gear
Pioneer	CDJ-2000NXS	Pioneer CDJ 2000NXS		DJ Gear
Pioneer	CDJ-3000	Pioneer CDJ 3000		DJ Gear
Pioneer	DDJ-FLX10	Pioneer DDJ-FLX10		DJ Gear
Pioneer	DDJ-SP1	Pioneer DDJ-SP1		DJ Gear
Pioneer	DDJ-SX2	Pioneer DDJ-SX2		DJ Gear
Pioneer	DDJ-SX3	Pioneer DDJ-SX3		DJ Gear
Pioneer	DJM-900NXS	Pioneer DJM 900 NXS		DJ Gear
Pioneer	DJM-900NXS2	Pioneer DJM 900 NXS2		DJ Gear
Pioneer	DJM-900SRT	Pioneer DJM 900 SRT		DJ Gear
Pioneer	DJM-S11	Pioneer DJM S11		DJ Gear
Pioneer	DJM-V10-LF	Pioneer DJM-V10-LF		DJ Gear
Pioneer	DJMS9	Pioneer DJM S9		DJ Gear
Pioneer	DJMV10	Pioneer DJM V10	 	DJ Gear

Pioneer	DJS-1000	Pioneer DJS-1000		DJ Gear
Pioneer	PLX-1000	Pioneer PLX 1000		DJ Gear
Pioneer	DJM-A9	Pioneer DJM A9		DJ Gear
Pioneer	RMX1000	Pioneer RMX-1000		DJ Gear
Pioneer	XDJ-RX3	Pioneer XDJ-RX3		DJ Gear
PLAYdifferently	Model1	Play Differently Model 1		DJ Gear
Rane	MP2015	Rane MP2015		DJ Gear
Rane	One	Rane ONE DJ Controller		DJ Gear
Rane	SEVENTY-TWO	Rane SEVENTY-TWO		DJ Gear
Rane	SEVENTY-TWOMKII	Rane SEVENTY-TWO MKII		DJ Gear
Rane	SIXTY-EIGHT	Rane SIXTY EIGHT		DJ Gear
Rane	SIXTY-TWO	Rane SIXTY TWO		DJ Gear
Rane	SL3-Blue	Rane SL3 Blue		DJ Gear
Rane	SL4	Rane SL4		DJ Gear
Rane	TTM57MKII	Rane TTM57 MKII		DJ Gear
Rane	TTM57SL	Rane TTM57 SL		DJ Gear
Rane	TWELVEMKII	Rane TWELVE MKII		DJ Gear
Rane	TWELVE	Rane TWELVE		DJ Gear

Technics	SL1200MK7	Technics SL1200 MK7		DJ Gear
Technics	SL1200MK2	Technics SL1200 MK2		DJ Gear
Technics	SL1200MK5	Technics SL1200 MK5		DJ Gear
Technics	SL1210MK2	Technics SL1210 MK2		DJ Gear
Technics	SL1210MK5	Technics SL1210 MK5		DJ Gear
Technics	SL1210MK7	Technics SL1210 MK7		DJ Gear
Teile Elektronik	Teil3 B&	TEIL3 B& Analog Isolator		DJ Gear
Native Instruments	Traktor Kontrol S2 MK3	Native Instruments Traktor Kontrol S2 MK3		DJ Gear
Universal Audio	Apollo Twin MKII	Universal Audio Apollo Twin MKII		DJ Gear
Vestax	PDX3000MKII	Vestax PDX3000 MKII		DJ Gear
Vestax	PMC-500	Vestax PMC 500		DJ Gear
